




WATER STREET

JAMESTOWN NEW YORK

BACK TO BACK PULL ASSEMBLY DISC MOUNT - WOODEN DOORS

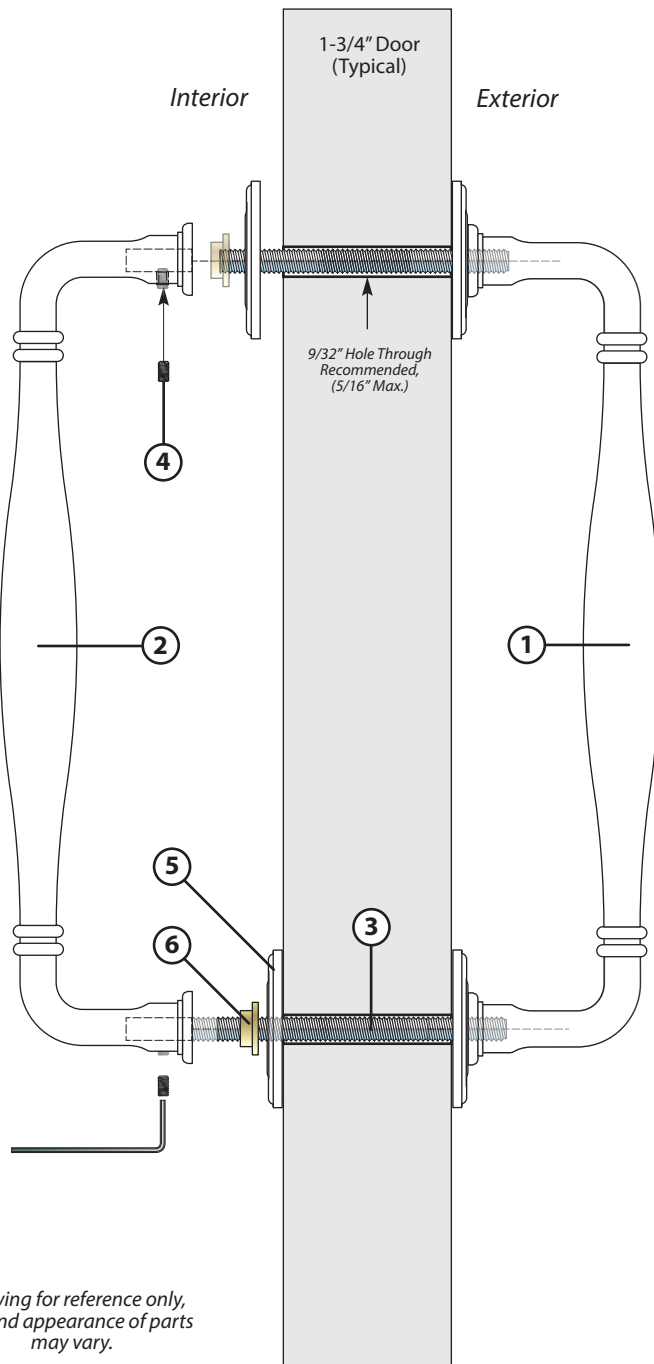

*Drawing for reference only,
size and appearance of parts
may vary.*

INSTALLATION INSTRUCTIONS

1. Determine the location of the pulls on your door and confirm the center to center dimension of your pulls. Mark the locations of the through holes making sure they are parallel to the edge of the door.
2. Drill two through holes in the door. 9/32" to 5/16" holes are recommended. If your hole exceeds 3/8" it will be necessary to use the back plates, as shown.
3. Install the two threaded rods into the exterior pull. Locate the back plates over the rods and install through the door.
4. Install the exterior back plates over the threaded rods. Secure the exterior pull to the door by firmly threading the two back to back mounting discs onto the rods and snugging tightly.
5. Slide the interior pull over the mounting dowels and secure by tightening the two set screws with the Allen wrench provided.

Bill Of Material

Part Description	Quantity
1. Exterior Pull	1
2. Interior Pull, Back to Back	1
3. 1/4-20 Threaded Rod	2
4. Set Screw	2
5. Back Plate	2
6. Back to Back Mounting Disc	2
Allen Wrench	1