




**WATER STREET**

JAMESTOWN NEW YORK

## BACK TO BACK PULL ASSEMBLY HUDSON COLLECTION - WOODEN DOORS

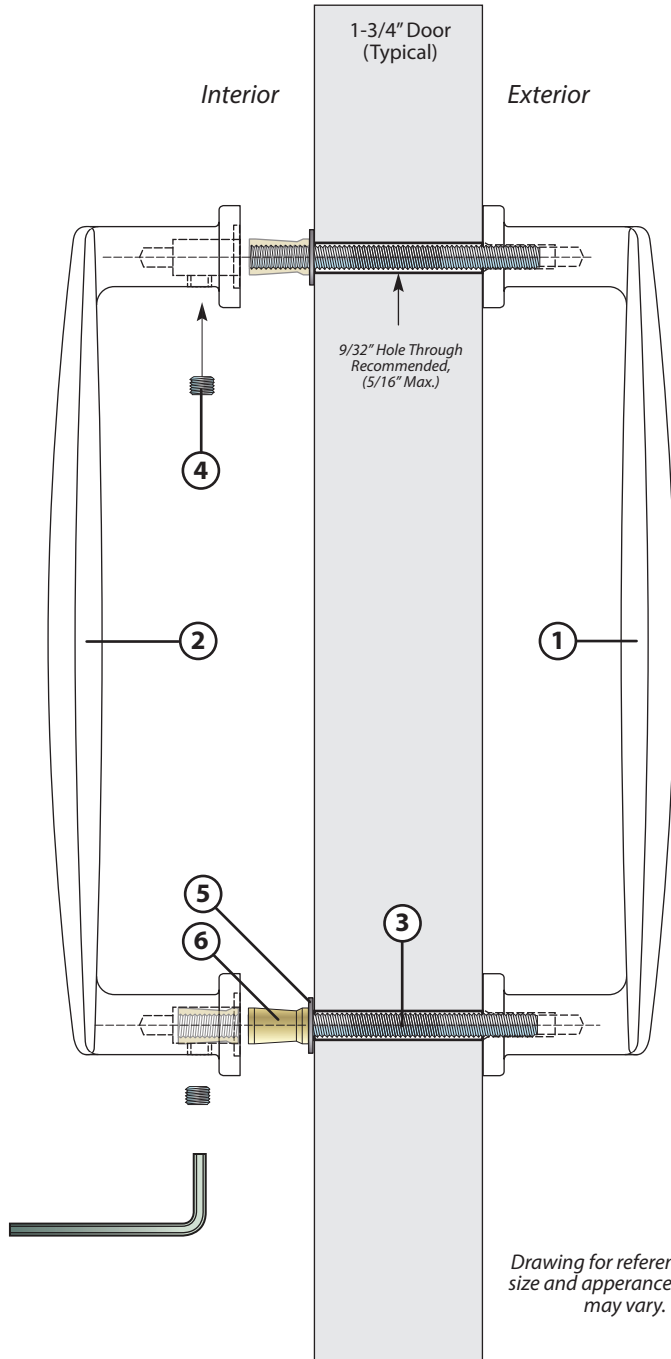

### INSTALLATION INSTRUCTIONS

1. Determine the location of the pulls on your door and confirm the center to center dimension of your pulls. Mark the locations of the through holes making sure they are parallel to the edge of the door.
2. Drill two through holes in the door. 9/32" to 5/16" holes are recommended. If your hole exceeds 3/8" it will be necessary to use the two flat washers provided.
3. Install the two threaded rods into the exterior pull and install through the door.
4. Secure the exterior pull to the door by firmly threading the two back to back mounting dowels onto the rods. If necessary, slide the two flat washers over the threaded rods on the door interior before attaching the dowels.
5. Check the vertical alignment of the exterior pull, then slide the interior pull over the mounting dowels and secure by tightening the two set screws with the Allen wrench provided.

### Bill Of Material

Part Description	Quantity
1. Exterior Pull	1
2. Interior Pull, Back to Back	1
3. 1/4-20 Threaded Rod	2
4. Set Screw	2
5. Flat Washer (Use if needed)	2
6. Back to Back Mounting Dowel	2
Allen Wrench	1