




WATER STREET.

JAMESTOWN NEW YORK

MTT-FD - ENTRY HANDLE FULL DUMMY THUMBPIECE X THUMBPIECE SET

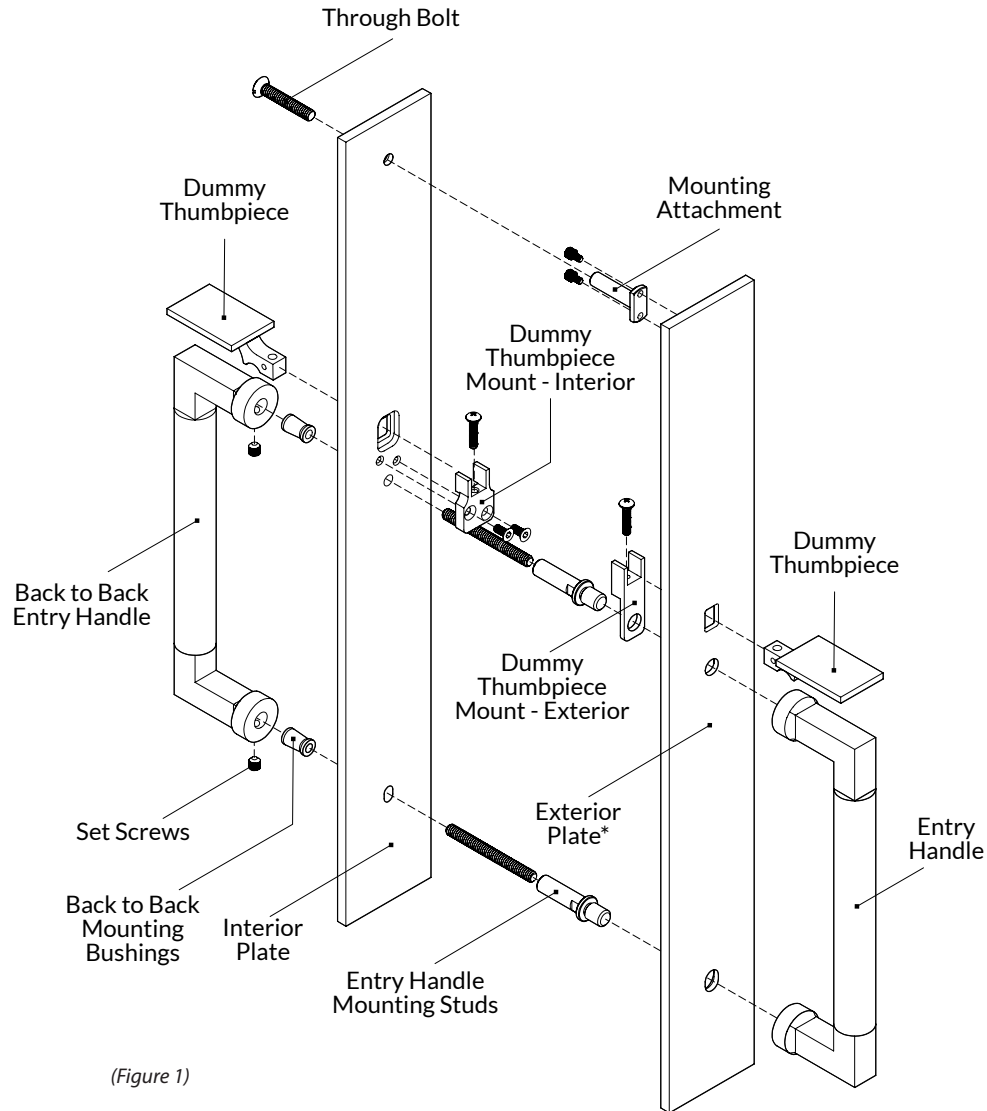

(Figure 1)

FULL DUMMY SET

An entry handle thumbpiece by thumbpiece full dummy set features fixed thumb piece on the exterior and interior.

- The exterior plate has an entry handle, a fixed thumbpiece, and two entry handle mounting studs.
- The interior plate has a back to back entry handle, a fixed thumb piece, with an exposed through bolt.
- Optional exposed screw trim is available.

STRIKE OPTION


In some instances, the dummy set is used on the fixed leaf of a double door set. The dummy door may include a strike plate for the active door lock. Installation is covered in the active door instructions.



WATER STREET.

JAMESTOWN NEW YORK

MTT-FD - ENTRY HANDLE FULL DUMMY THUMBPIECE X THUMBPIECE SET

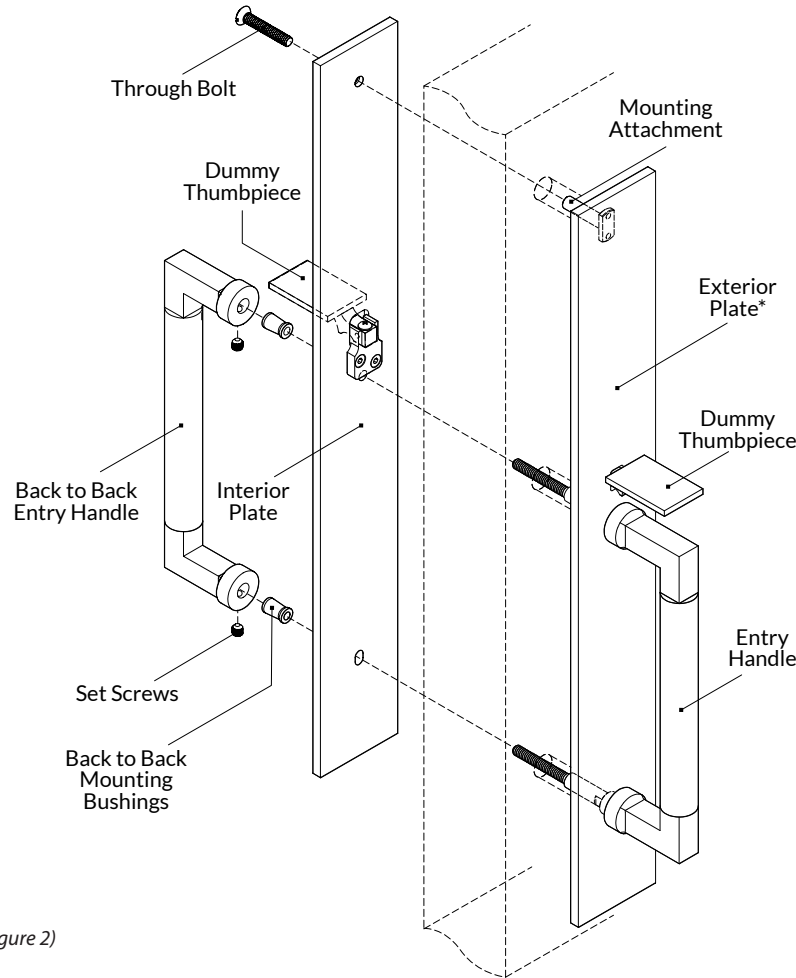

(Figure 2)

PREPARE DOOR

1. Prepare the door according to the template provided.

INSTALL THE HARDWARE

2. Fit the exterior plate and entry handle onto the door surface, passing the entry handle mounting studs through the bore holes. If not already installed, fully screw the two threaded rods into the mounting studs.
3. Next, position the interior plate on the door and install the back to back mounting bushings onto the threaded rods. Make sure both plates are square and parallel to the door edge, and adjust as needed. Tighten mounting bushings.
4. From the interior side, install the upper through bolt into the mounting attachment and tighten firmly.
5. Fit the interior back to back entry handle onto the mounting bushings. If the threaded rod protrudes too far to allow the handle to seat, you may need to cut the rods to a suitable length.
6. With the back to back handle firmly seated to the interior plate, tighten the two set screws firmly using an Allen wrench. (Figure 2)

If surface mount screws are to be used, now is when you should mark the screw hole locations and drill pilot holes. Install the screws.