




WATER STREET

JAMESTOWN NEW YORK

SOLID WALL MOUNTED PULL

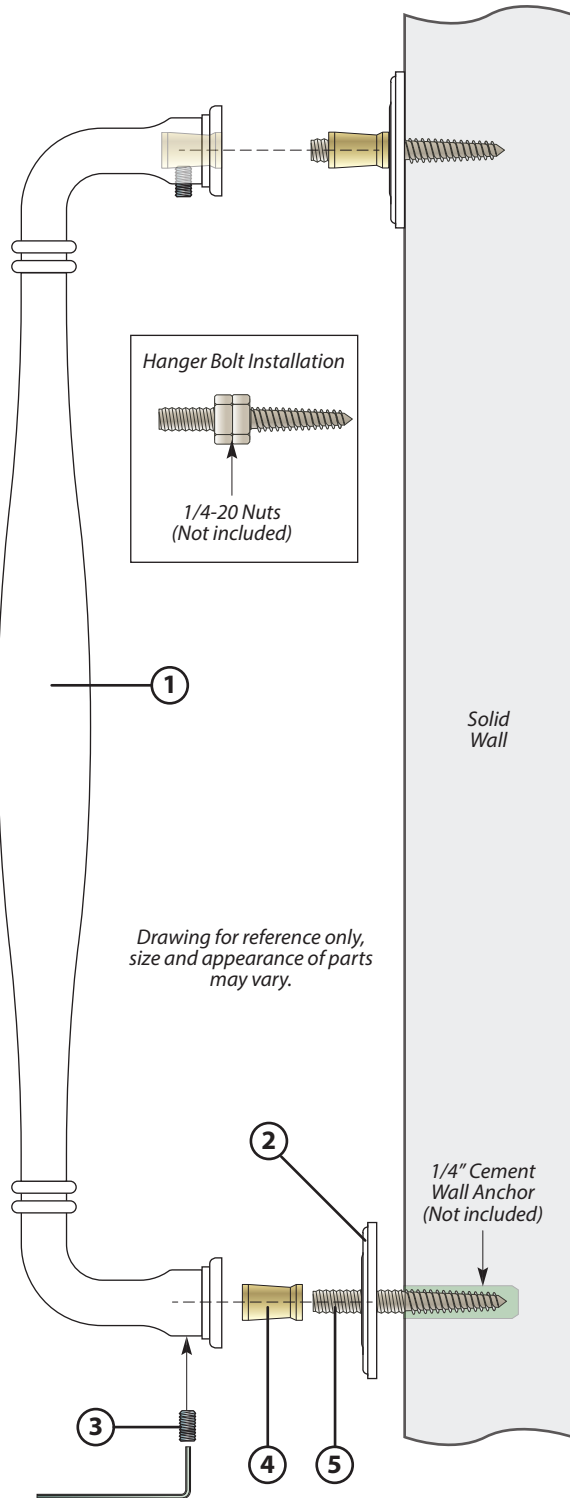

INSTALLATION INSTRUCTIONS

1. Determine the location of the pulls on your wall, confirm the center to center dimension, and mark the locations, making sure the marks are aligned vertically or horizontally.
2. For wood walls, drill two 5/32" pilot holes in the wall. For cement or block walls, you will require screw anchors for a 1/4" screw.
3. Install the two hanger bolts into the wall. To prevent damage to the machine threads, it is suggested that you thread two 1/4-20 nuts (not included) onto the bolt down to the point where the thread transitions from machine to wood thread, as shown.

Using a hand or socket wrench, seat the hanger bolt into the wall, making sure it is straight and perpendicular to the wall surface. When fully seated, remove the nuts and repeat with the second bolt.
4. Install the back plates over the hanger bolts. Firmly tighten the back to back mounting dowels onto the bolts.
5. Slide the back to back pull over the mounting dowels and secure by tightening the two set screws with the Allen wrench provided.

Bill Of Material

Part Description	Quantity
1. Back to Back Pull	1
2. Back Plate	2
3. Set Screw	2
4. Back to Back Mounting Dowel	2
5. 1/4-20 Hanger Bolt	2
Allen Wrench	1